

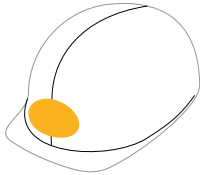



1 Clean and Dry




2 Peel

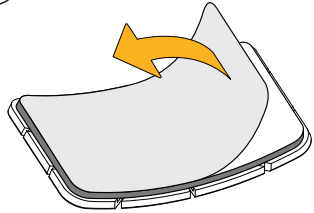

3 Position

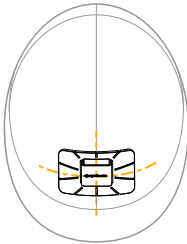

4 Press (1 min)

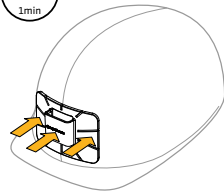

5 Wait



21 - 38°C



SCAN FOR MORE INFO



Important - Read before use!

Before mounting the adhesive helmet adapter on your safety helmet, consult local health and safety organization for information about regulations that may apply.

Contact helmet supplier/Manufacturer for information about regulations that may apply, before mounting the adhesive helmet adapter on your safety helmet.

Mounting Silicone Pad

